

Desmear sweller  
automatic controller

METIS - 7000

# NaOH

## Features

- Metis-7000 NaOH is a desmear sweller automatic controller. It can analyze sodium hydroxide (NaOH) concentration which is active component of process solution used for swelling process of desmear treatment at production line of flat panels and replenish (output signals for replenishment) supply solution automatically.
- Can maintain high analysis accuracy by washing sensors every after analysis cycle ends.
- Can perform the optimum control of analysis and replenishment by simple parameter change.
- Easy to integrate into specification of production line.
- Contribute to cost down by reducing amounts of use of process solution and labor costs for analysis and replenishment.

## Specification

### ■Function

Control items/ analysis method	1. pH value / grass electrode method 2. NaOH concentration / neutralization titration (analysis accuracy $\pm 2.0\%$ )
Replenishing	Controlling replenishing pumps based on analysis result. ※Replenishing system needs mutual consultation about conditions at processing line.
Cycle time	About 15 minutes



Image picture

### ■Specification

Dimension / Weight (body)	W385 × H380 × D455(mm) / 30kg
Dimension / Weight (Footstool)	W465 × H930 × D425(mm) / 20kg
Power supply	AC100V ( $\pm 10\%$ )、60/50Hz、3P Plug+ Ground (separated ground line needed for equipped computer)
Power dissipation	200VA(max)


■Option (Below is just some example for your consideration. If you have requests, please feel free to contact us.)

Alarm	Patrol light, various signal towers.
DI water supply unit	Automatically supplying DI water used for analysis.
Data communication	CC-Link、RS-232C、RS-485、4-20mA communication、external control, etc.

## System summary



## Automatically analysis flow

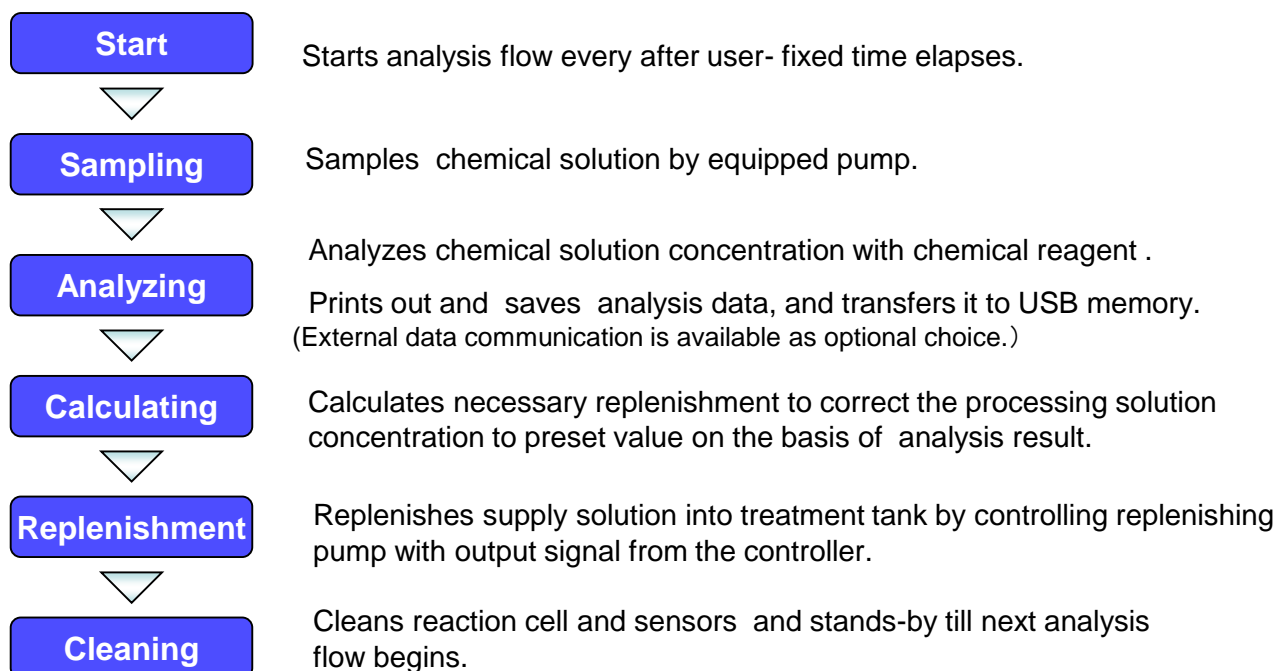

Note1) Please use our designated genuine parts or reagents for maintenance and running in order to prevent unexpected troubles.

Note2) Please be notified that we may change the specification or appearance of the controller for improvement without notice.

Note3) So as to maintain analysis accuracy, we recommend periodical maintenance or adjustment by our skilled engineer. (out of warranty)

## For inquiry contact



ISHIHARA CHEMICAL CO., LTD.

Head Office 5-26 Nishiyanagiwara-cho, Hyogo-ku, Kobe-shi, Hyogo 652-0806, Japan Phone+81-78-682-2307(Direct)

Tokyo Branch 2-26-11 Taito, Taito-ku, Tokyo 110-0016, Japan Phone+81-3-3832-8037(Direct)